



# TABLE2TABLE™

6-IN-1 成長型多用途餐椅

User Manual 使用說明書



## **1 警告 WARNING**

*Pages 4-7*

## **2 產品特徵 Features**

*Pages 8-10*

- 2-A 本產品可以下列模式使用：  
This product can be used in the following modes:
- 2-B 各部位名稱  
Parts list

## **3 組裝 Assembly**

*Pages 11-15*

- 3-A 組裝高腳椅  
Assembling Highchair

## **4 使用方法 Use**

*Pages 16-38*

- 4-A 將餐椅安裝於高腳椅及拆下的方法  
To Attach/Remove Infant Seat to/from Toddler Chair
- 4-B 餐盤的安裝方法  
Attaching Tray
- 4-C 高腳椅的使用模式  
Highchair Modes
- 4-D 座椅角度調節  
Recline
- 4-E 將幼童餐椅固定於椅子上  
Infant Booster on Chair Mode
- 4-F 孩童組合餐椅模式的使用方法  
To Use as Toddler Booster
- 4-G 安全固定裝置  
To Secure Child
- 4-H 座椅模式  
Chair Modes
- 4-I 孩童用餐桌椅使用時  
Using as Toddler-sized Chair and Table

**5-A 日常保養  
Care and Maintenance**

**重要！**  
**請妥善收存使用手冊以供日後使用。**  
**IMPORTANT!**  
**PLEASE SAVE THIS BOOK FOR**  
**FUTURE USE.**

# 警告

若不遵守這些警告和安裝說明可能導致嚴重傷害或死亡。

- 請妥善收存使用手冊以供日後使用。
- 需由成人組裝。
- 使用本產品時，請勿讓孩子離開視線。
- 切勿讓孩子自行從桌旁推開。
- 警告!兒童乘坐於高腳椅時，任何期間內安全帶必須正確調整而且繫好兒童，為防止因滑出、掉落或翻倒所造成之嚴重傷害或死亡，無論椅背為傾斜或直立的位置時，請務必使用本產品所附之安全帶以固定約束並保護您的孩子，餐盤並非用來將孩子固定於本產品中，建議於嬰幼童無需協助即可自己獨立坐好時，方可使用本產品的坐立模式。
- 本產品作為幼童高腳椅、幼童餐椅模式及  
兒童組合餐椅模式使用時，僅適用於 36 個月以下、體重 18 公斤以下之孩童使用。作為兒童餐椅或兒童餐桌椅使用時，僅適用於 72 個月以下、體重 27.3 公斤 (60 磅) 以下之孩童使用。
- 切勿將餐盤強壓向孩童，請使用三個調整位置，請確認兩個調整齒輪皆固定於扶手槽內。
- 窒息的危險：請勿將產品置於具繩索，如窗簾繩、窗簾、電話線等之任何區域附近。
- 請依照本說明書指示謹慎操作，若遇到任何困難，請致電客服中心(請參閱封底)。
- 切勿於孩童乘坐時取出幼童餐椅。

# **WARNING**

**Failure to follow these warnings and the assembly instructions could result in serious injury or death.**

- **PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.**
- **ADULT ASSEMBLY REQUIRED.**
- **NEVER LEAVE CHILD UNATTENDED.** Always keep your child in view.
- **IN HIGHCHAIR AND BOOSTER MODES:**  
**NEVER** allow a child to push away from table.
- **PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT.**  
Always use the restraint system. Secure your child at all times with the restraint system provided, either in the reclining or upright position. The tray is not designed to hold your child in the product. It is recommended that the product be used in the upright position only by children capable of sitting upright unassisted.
- **THIS PRODUCT IS DESIGNED AS A** highchair, infant booster, toddler booster for use with child up to 3 years of age & 40 lb (18 kg). For a toddler chair or toddler sized chair for use with a child up to 6 years of age and up to 60 lb (27.3kg).
- **DO NOT FORCE TRAY** against child. Use only the three adjustment positions. Be sure both adjustment fingers are engaged in armrest slots.
- **STRANGULATION HAZARD**  
Do not place product in any location where there are cords, such as window blind cords, drapes, phone cords, etc.
- **FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.** If you experience any difficulties, please contact the Customer Service Department.
- **DO NOT** remove booster from youth chair with child in it.

# 警告

若不遵守這些警告和安裝說明可能導致嚴重傷害或死亡。

- 摔倒危險：切勿於孩童乘坐時移動或拉高座椅。
- 請勿於機動車上使用本產品，以防止造成嚴重傷害或死亡。
- 將本產品固定於椅座上時，請務必使用安全帶並確保安全帶緊緊拉住。
- 若本產品無法安全且牢牢固定於該成人座椅，請勿於該椅子使用本產品。
- 本產品僅可使用Table2Table™之配件。
- 36個月以下的孩童使用孩童組合餐椅模式時請務必使用3點式安全帶。並搭配Table2Table™孩童高腳椅使用。
- 未附幼童座椅的孩童餐椅模式僅適用於36至72個月的孩童。
- 請務必依照說明書指示正確使用本產品。
- 警告!注意火源及其他熱源，使用的時候，請勿靠近電熱器、瓦斯之類的危險物品。
- 請務必確認安全裝置已經安裝妥當。


# **WARNING**

**Failure to follow these warnings and the assembly instructions could result in serious injury or death.**

- **PREVENT SERIOUS INJURY OR DEATH FROM SLIDING OUT, FALLS, OR TIPPING OVER.**
- **DO NOT** use the product near dangerous items such as heating equipment.
- **PREVENT SERIOUS INJURY OR DEATH.** Do not use in motor vehicles.
- **ALWAYS MAKE SURE** the safety devices have been installed properly.
- **ALWAYS USE** booster straps to attach booster to any chair. Always ensure straps are pulled tight.
- **IF BOOSTER CANNOT** be securely and safely attached to the adult chair, do not use booster with that chair.
- **USE ONLY** Table2Table™ highchair accessories with this product.
- **TODDLER BOOSTER WITH 3 POINT BUCKLE** must be used with child less than 3 years. Always use harness.
- **FOR USE ONLY** with the Table2Table™ toddler chair.
- **TODDLER CHAIR** without toddler booster is only for child 3 to 6 years of age.
- **ONLY USE PRODUCT AS INSTRUCTED.**

**2-A 本產品可以下列模式使用：**  
**This product can be used in the following modes:**

年齡和體重的數值均為參考值。  
The Product of age and weight are for reference only.

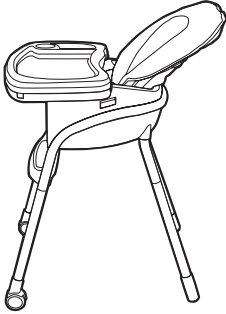


**幼童斜躺型高腳椅模式**

6個月~36個月 (18kg)

**Infant Highchair with Recline**

6 months to 3 years (18 kg)

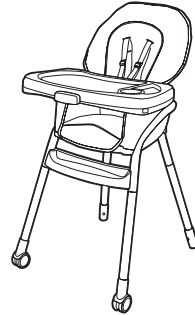


**幼童高腳椅模式**

6個月~36個月 (18kg)

**Traditional Highchair**

6 months to 3 years (18 kg)

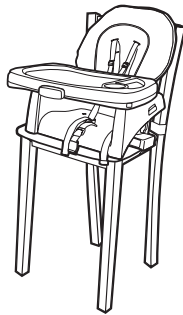


**幼童餐椅模式**

6個月~36個月 (18kg)

**Infant Booster**

6 months to 3 years (18 kg)



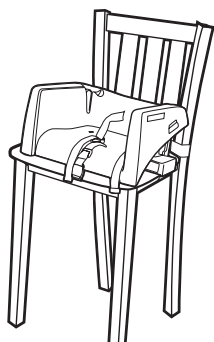


**孩童組合餐椅模式**

12個月起~36個月左右 (18kg)

**Toddler Booster**

1 to 3 years (18 kg)

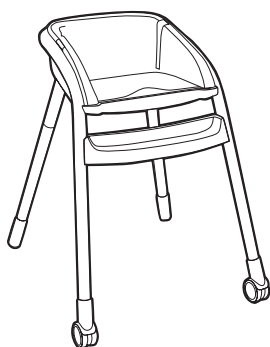


**孩童餐椅模式**

36個月起~72個月左右  
(27.3kg)

**Toddler Chair**

3 to 6 years (27.3kg)

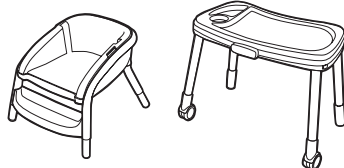

**孩童餐桌椅模式**

36個月起~72個月左右  
(27.3kg)

**Toddler Sized Chair & Table**

3 to 6 years (27.3kg)

## 2-B 各部位名稱 Parts list







不同型號可能不包括下圖所示配件，安裝前請檢查所有零件，若有缺少、弄錯或者破損，請與經銷商或者總公司連絡。  
請參閱封底「保證書」

This model may not include some features shown below. **Check** that you have all the parts for this model **BEFORE** assembling your product. If any parts are missing, call Customer Service.


無需使用任何工具來安裝。

**No tools required.**

### 所有配件 ALL ACCESSORY

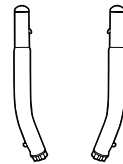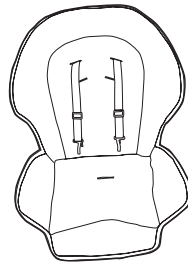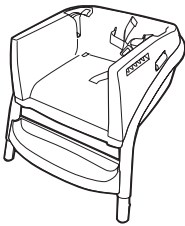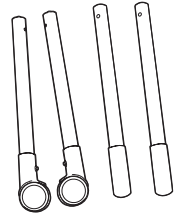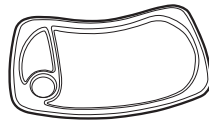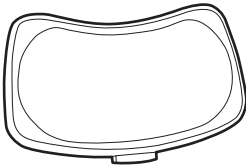


### 3-A 組裝高腳椅 Assembling Highchair

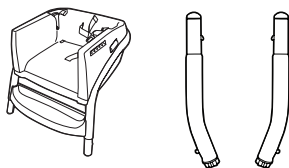

1. 如圖所示，將孩童餐椅翻轉至底部朝上，按下椅腳上段的按鈕，將後椅腳上段插入座椅孔。向上拉動，確認椅腳已確實固定。


Flip toddler-sized seat over, press down buttons on legs and insert top rear legs into holes in seat as shown. **CHECK** that legs are secured by pulling up on them.


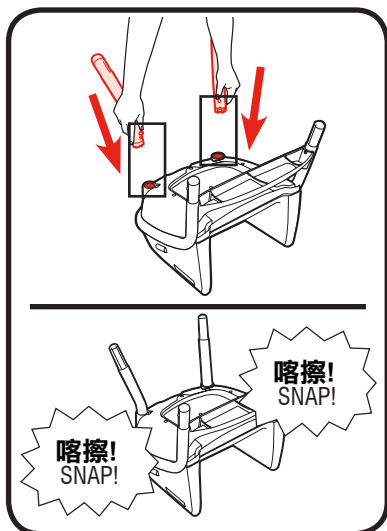


2. 將後椅腳下段（無輪）接到後椅腳上段。如圖所示，確認按鈕確實卡入定位。

Attach bottom rear leg tubes (without wheels) over top rear legs tubes.

 **CHECK** that buttons snap into place as shown.

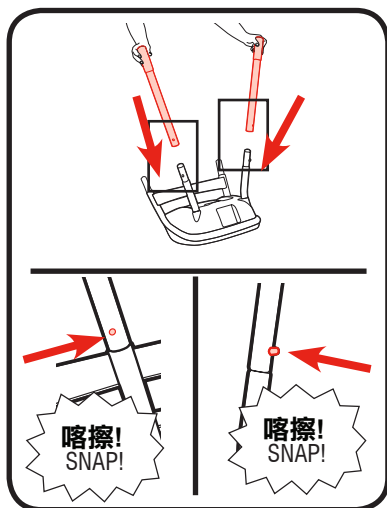


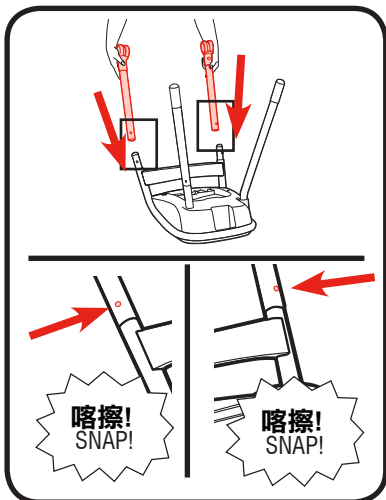

3. 將附輪的椅腳，插入連接腳踏板的椅腳。如圖所示，確認按鈕確實卡入定位。

Insert leg tubes with wheels into tubes with footrest attached.


**CHECK** that buttons snap into place as shown.

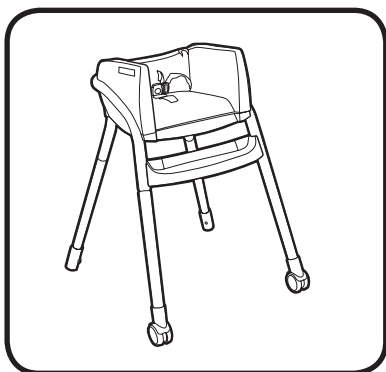

4. 如圖所示，將組合好的高腳椅轉正為站立方向。


Place assembled toddler chair upright as shown.

## 將座椅保護套與椅背安裝至座椅底座 Seat Pad and back to seat bottom

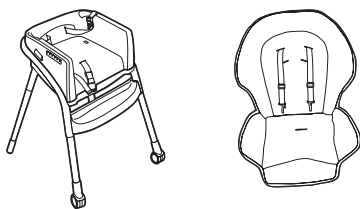

5. 若要取下幼童座椅，請同時向上拉住座椅兩側的按鈕，將座椅拿起。


To remove infant seat, pull up on buttons on side of seat and lift up.

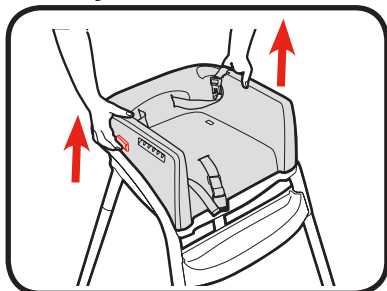

6. 將椅背插入幼童座椅的底座。  
**注意：**請注意不要讓安全帶卡在座椅底座與椅背之間。


Insert seat back into base of infant seat.


**NOTE:** Make sure straps **DO NOT** get caught between seat bottom and back.

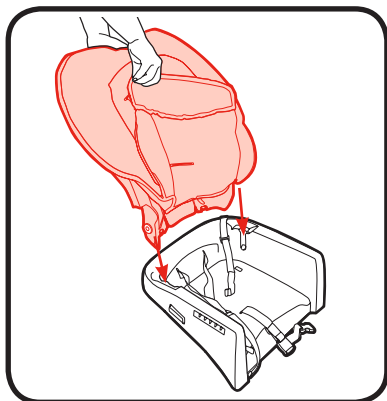

7. 將椅背向下壓，確定接合點牢固固定至座椅底座。


Push down on seat back to make sure attachment points secure into seat bottom.

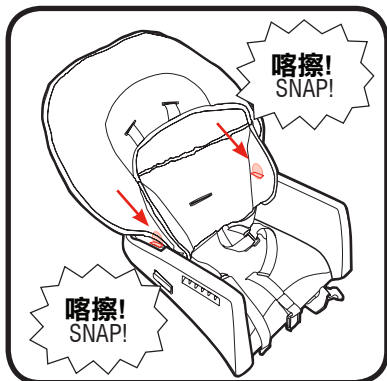

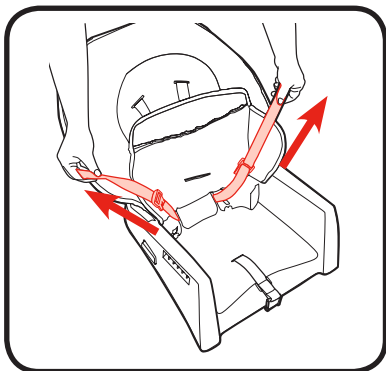


8. 將安全腰帶滑入椅背的導孔，  
確認安全腰帶並未扭轉，並  
且與導孔平行。

Slide waist straps into slots in seat back. **CHECK** that waist straps are not twisted and parallel with slots.

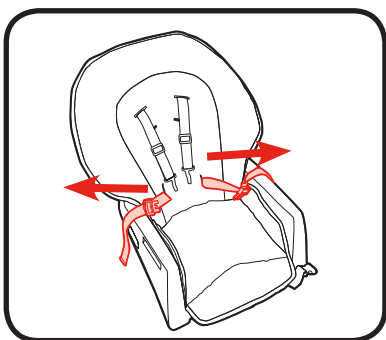

9. 將安全腰帶由座椅保護套導孔  
穿出。

Pull waist straps through openings  
in seat pad.

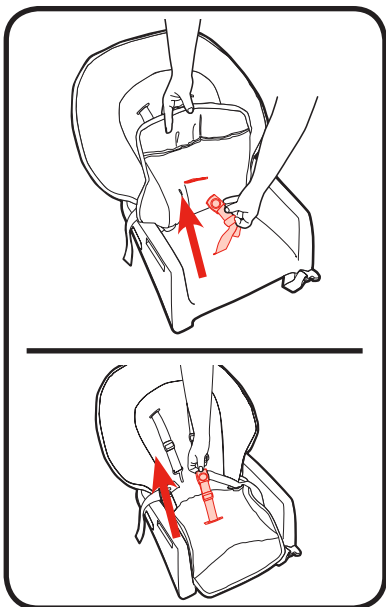


10. 將安全股帶由座椅保護套導  
孔穿出。

Pull crotch strap through opening  
in seat pad.


11. 如圖所示，將掛鉤固定至座椅底座。

Attach hooks to bottom of seat as shown.

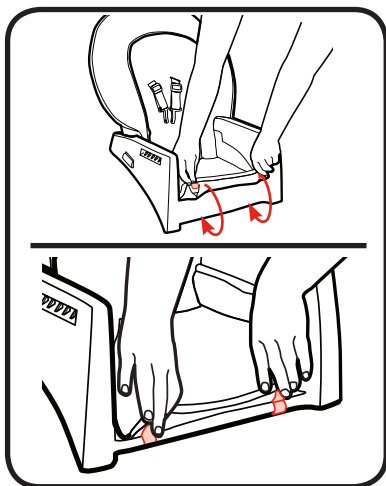


12. 如圖所示，將座椅保護墊上的掛鉤固定至椅背。

Attach hooks on seat pad to seat back as shown.

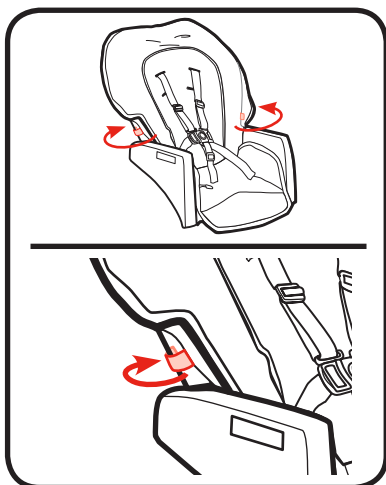


## 4-A 將餐椅安裝於高腳椅及拆下的方法 To Attach/Remove Infant Seat to/from Toddler Chair

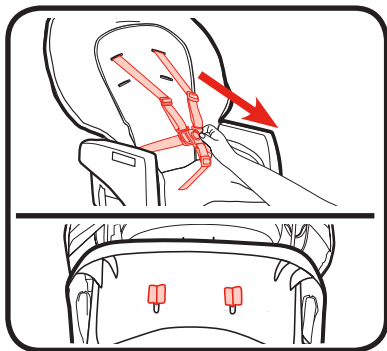


1. 拉動安全帶，使安全帶固定檔片貼齊座椅背面。

Pull harness so that mounts are flush with back of booster.

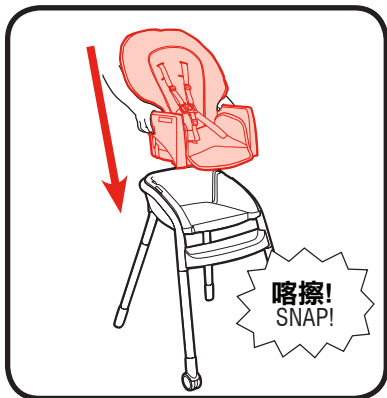

2. 將幼童座椅置於孩童高腳椅上。

Place infant seat on toddler chair.

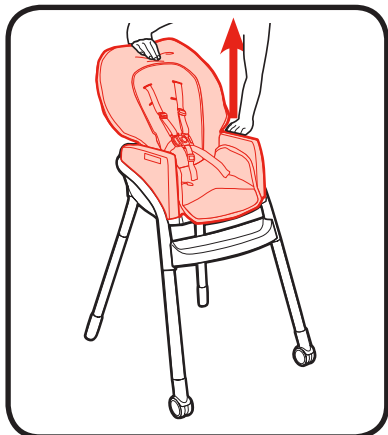

3. 向上拉動幼童座椅，確認幼童座椅確實卡入定位。

Check infant seat is latched into place by pulling up on it.




## **▲警告WARNING:**

當孩童乘坐時切勿移動餐椅。



DO NOT remove seat with the child in it.

若要取下幼童座椅，請向上拉住座椅兩側的按鈕，將座椅拿起。

To remove infant seat, pull up on buttons on side of seat and lift up.

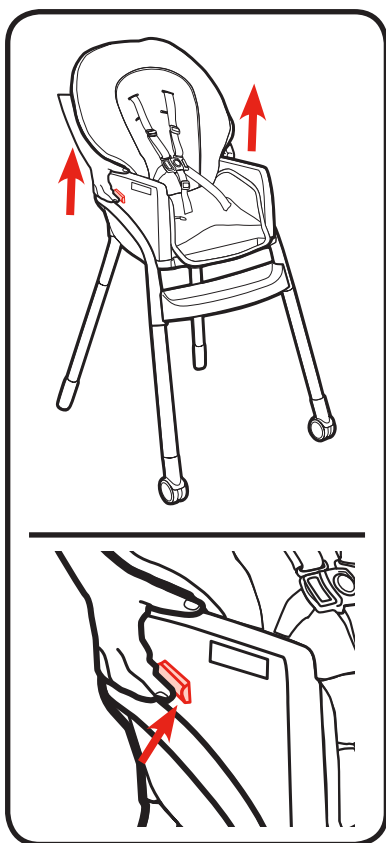

## 4-B 安裝餐盤 Attaching Tray

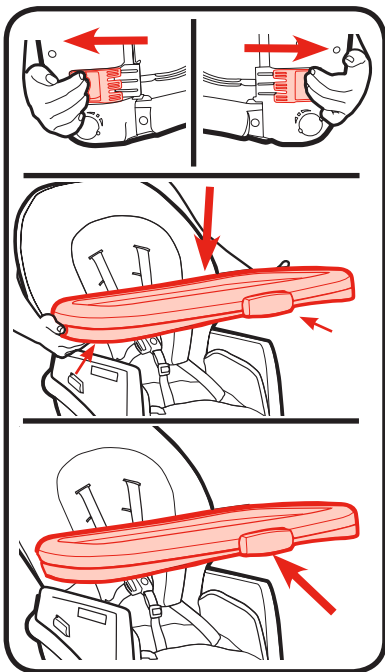 


1. 壓住餐盤底部的兩側把手，或按下餐盤正面的按鈕，將餐盤裝上高腳椅。

Squeeze both handles on bottom of tray OR press button on front of tray and place onto highchair.

## 上層餐盤 Tray Insert



上層餐盤可使用洗碗機清洗\*。  
Dishwasher safe.

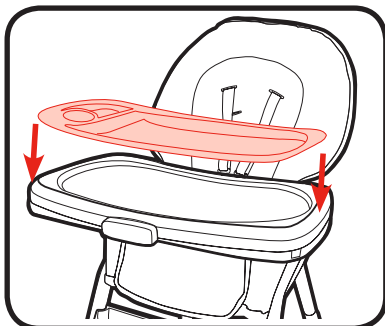


1. 將上層餐盤壓入餐盤即可固定。

Attach tray insert by pushing it down on the tray.

(\*洗碗機容量之寬度或高度須60cm以上)

2. 不使用時，請由餐盤後方拉起。


To remove pull up on the back of the tray.

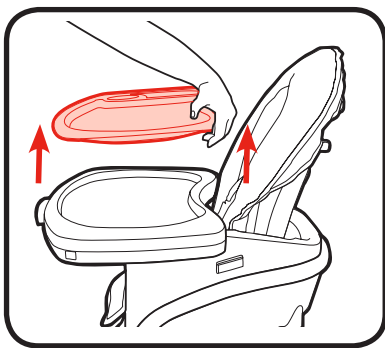

## 拆卸餐盤 To remove tray


1. 壓住餐盤底部的兩側把手，或按下餐盤正面的按鈕，將餐盤卸下。

Squeeze both handles on bottom of tray OR press button on front of tray to release.

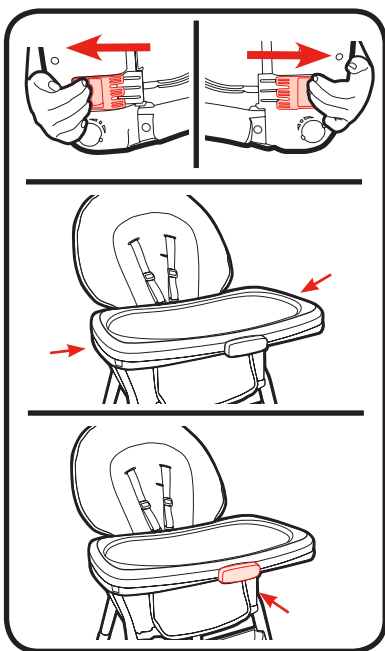


2. 將餐盤從高腳椅上拿起。

Lift tray off of highchair.

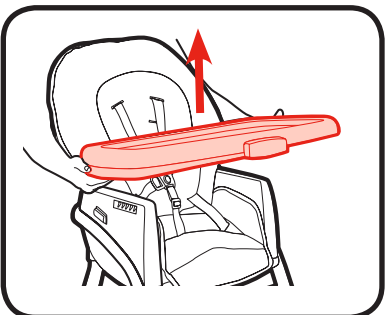

## 4-C 高腳椅的使用模式 Highchair Modes


### 幼童斜躺型高腳椅模式-6個月~36個月(18kg)適用 Infant Highchair with Recline - 6 months to 3 years (18 kg)

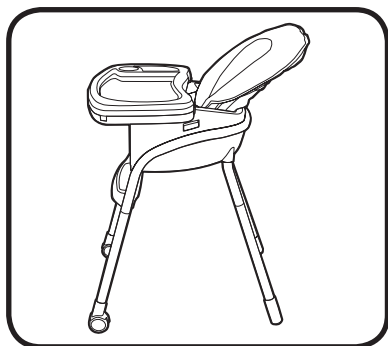

1. 做為幼童斜躺型高腳椅模式使用時的椅背調節方式 (請參閱 4-D 「座椅角度調節」)。

To use as infant highchair recline seat back (see Recline Section, 4-D).

### 幼童高腳椅模式-6個月~36個月(18kg)適用 Traditional Highchair - 6 months to 3 years (18 kg)

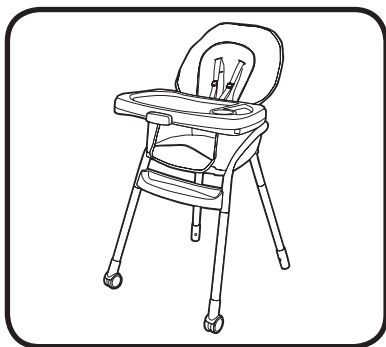

1. 做為幼童高腳椅使用，請將椅背調整為直立位置 (請參閱 4-D 「座椅角度調節」)。

To use as a traditional highchair adjust seat back to an upright position (see Recline Section, 4-D).

## 4-D 座椅角度調節 Recline


### ⚠️ 警告 WARNING:

請勿於孩童乘坐時調整座椅角度。


DO NOT adjust the seat recline with the child in it.

1. 按壓座位背面的把手，並下推或上拉來調整座椅角度。


Squeeze handle on back of seat and push down or pull up to adjust.

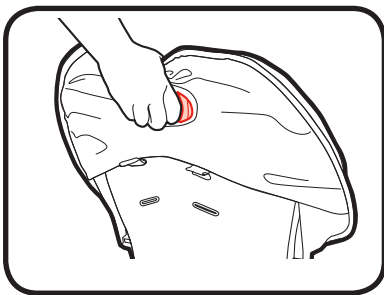

2. 可 3 階段調整座椅角度。  
There are 3 recline positions.

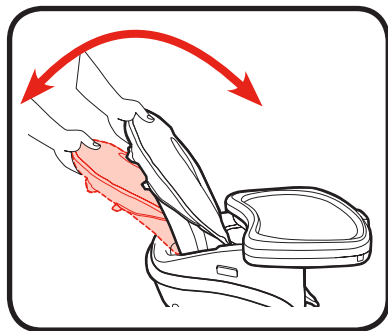


## 4-E 將幼童餐椅固定於椅子上 Infant Booster on Chair Mode

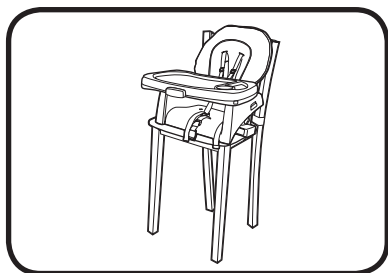

### 幼童餐椅模式 Infant Booster


6個月~36個月 (18kg)

6 months to 3 years (18 kg)

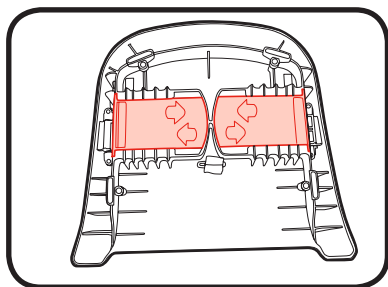


1. 將座椅翻轉至底部朝上，可見固定帶收納槽。

Flip seat over to access attachment strap storage.

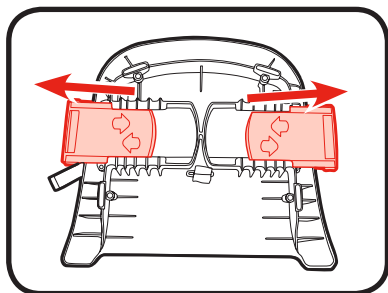

2. 將兩側固定帶收納槽向外滑開。

Slide strap storage doors open.

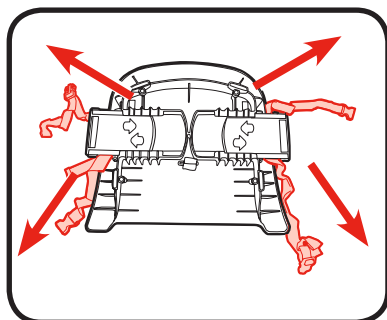


3. 如圖所示，拉出 4 條固定帶。

Pull 4 straps out as shown.

4. 請將幼童座椅置於沒有扶手但有椅背的椅子上，讓固定帶自然垂下，並確認搭配幼童座椅使用的椅子上，沒有多餘的椅墊或墊子。


Place infant seat on a chair with no armrests and that has a back, ensuring that the straps are hanging freely.


Make sure that there are no extra seatpads or cushions on the chair that you are using with the infant seat.

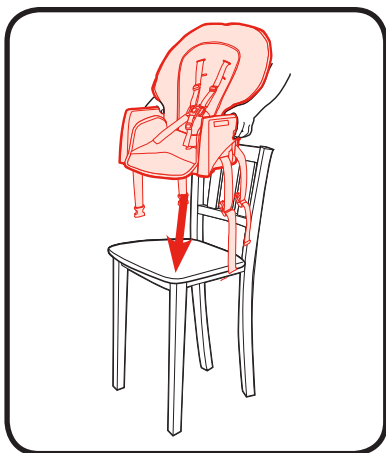

5. 將後方固定帶繞過椅子背面，扣上固定扣，並拉動調整固定帶來拉緊固定。

Wrap rear straps around back of seat and secure clip. Tighten by pulling on the adjustment strap.


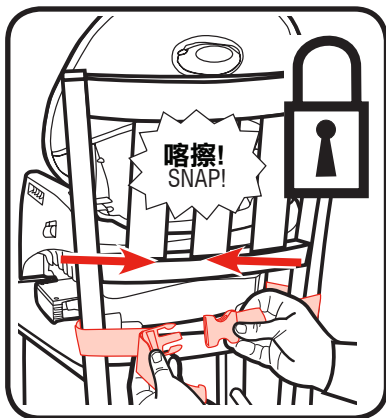


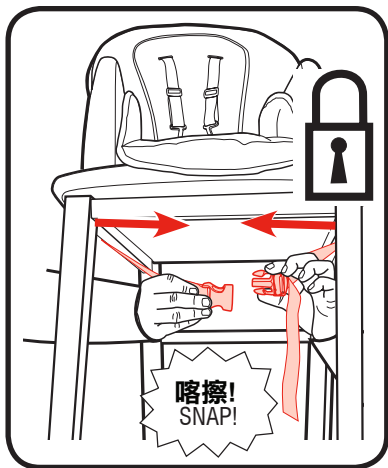

6. 將下方固定帶繞過椅子底座，在椅子下方扣上固定扣，並拉動調整固定帶來拉緊固定。左右移動，確認幼童座椅已牢牢固定。

Wrap bottom straps around base of seat and secure clip under the seat. Tighten by pulling on the adjustment strap.

**CHECK** to make sure infant seat is securely attached by moving from side to side.

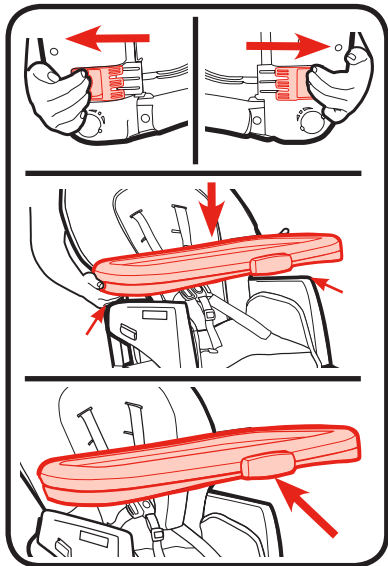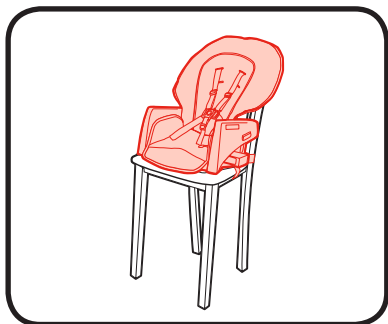

7. 安裝餐盤時，請壓住餐盤底部的兩側把手，或按下餐盤正面的按鈕，將餐盤裝上幼童餐椅。


To attach tray, squeeze both handles on bottom of tray OR press button on front of tray and place onto infant booster.



## 4-F 孩童組合餐椅模式的使用方法 To Use as Toddler Booster


1. 如圖所示，解開座椅底座的掛鉤。


Disconnect hooks from bottom of seat as shown.

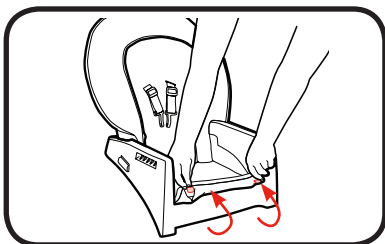

2. 將安全股帶及安全腰帶由座椅保護套導孔中抽出。


Push crotch strap and waist straps through seat pad.

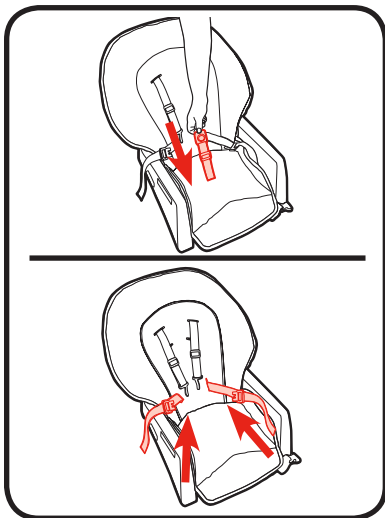

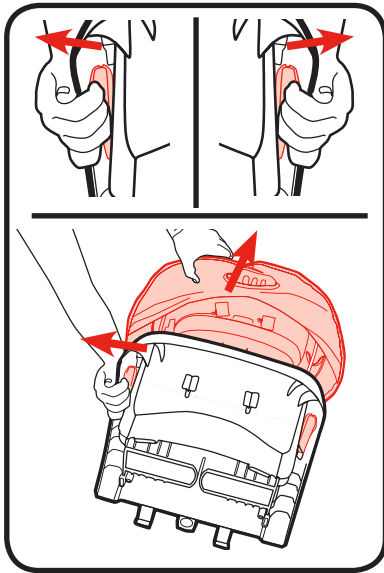


3. 拆下座椅後，請將幼童座椅翻轉讓底部朝上，將幼童座椅底座側面的拉把向外扳開，分開座椅及椅背並拉起椅背。在另一側重複相同動作。

To remove backrest, flip infant seat upside down and pull lever on side of infant seat base to release seat back and pull up on backrest. Repeat on other side.

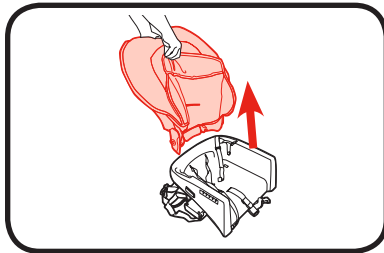

4. 將椅背從座椅底座拉起。

Pull seat back away from seat base.

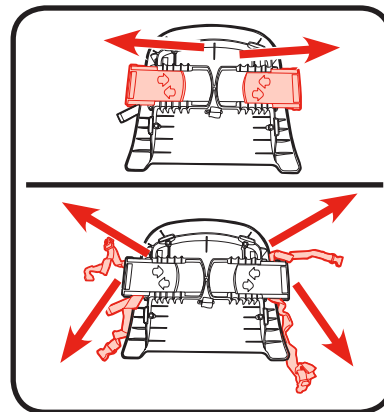


5. 將座椅翻轉至底部朝上，拉開連接固定帶收納槽。(請參閱第 4-E 節「將幼童餐椅固定於椅子上」的步驟 1 至 4。)

Flip seat base over to access attachment strap storage. (See Infant Booster on Chair Mode section 4-E, steps 1-4).


6. 請將本產品置於沒有扶手但有椅背的椅子上，讓固定帶自然垂下，並確認搭配餐椅使用的椅子上，沒有多餘的椅墊或墊子。

Place booster on a chair with no armrests and that has a back, ensuring that the straps are hanging freely. Make sure that there are no extra seatpads or cushions on the chair that you are using with the toddler booster.

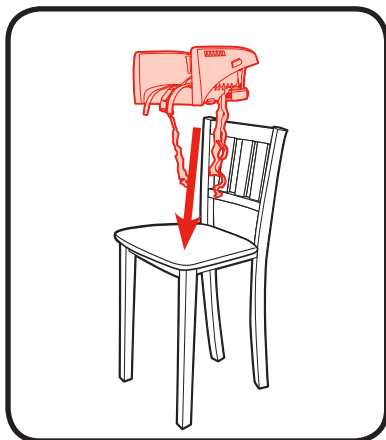


7. 將後方固定帶繞過椅子背面，扣上固定扣，並拉動調整固定帶來拉緊固定。


Wrap rear straps around back of seat and secure clip. Tighten by pulling on the adjustment strap.

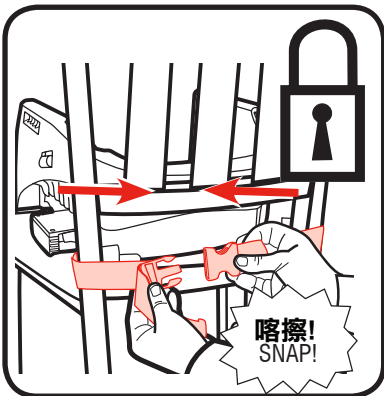

8. 將下方固定帶繞過椅子底座，在椅子下方扣上固定扣，並拉動調整固定帶來拉緊固定。左右移動，確認孩童餐椅已牢牢固定。

Wrap bottom straps around base of seat and secure clip under the seat. Tighten by pulling on the adjustment strap. **CHECK** to make sure toddler booster is securely attached by moving from side to side.

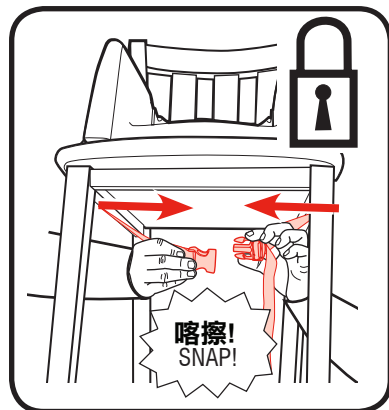


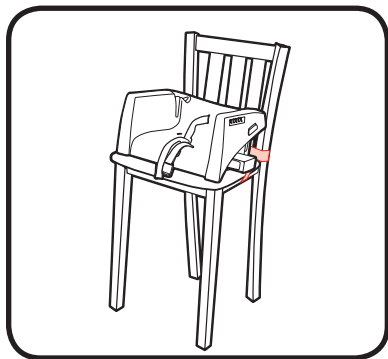


### 孩童組合餐椅模式 Toddler Booster

12個月起~36個月左右(18kg)

### 收納固定帶 To store attachment straps

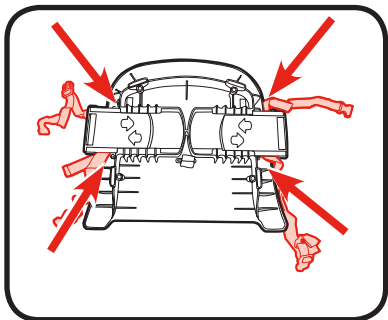

1. 將固定帶收入收納槽中。  
Insert straps into storage areas.

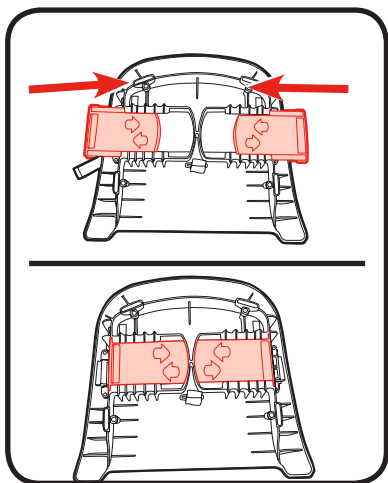

2. 滑動並關上固定帶收納槽外蓋。必須收納固定帶之後，才能將餐椅安裝至高腳椅架上。

Slide strap storage doors closed. Straps **MUST** be stored to attach booster to highchair frame/toddler chair.

## 4-G 安全固定裝置 To Secure Child

### ⚠️ 警告 WARNING:


跌落危險：請務必使用安全帶。

**Falling Hazard:** Always use the restraint system.

### 5點式安全帶 5 Point Harness


1. 解開時，請按下扣環上的按鈕，鬆開安全腰帶及肩帶。


To open, press button on buckle to release the waist straps.

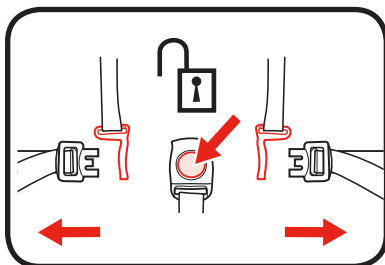

2. 鎖定時，請將安全肩帶接頭穿上安全腰帶，再插入扣環。

To close, slide shoulder strap connectors to waist straps and insert into buckle.

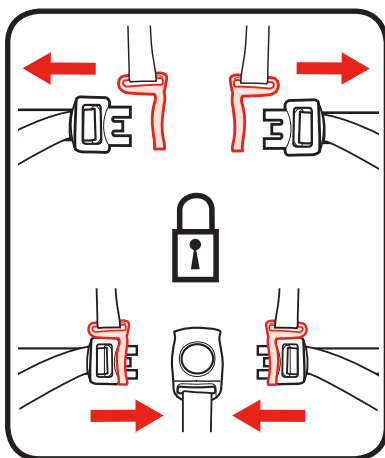


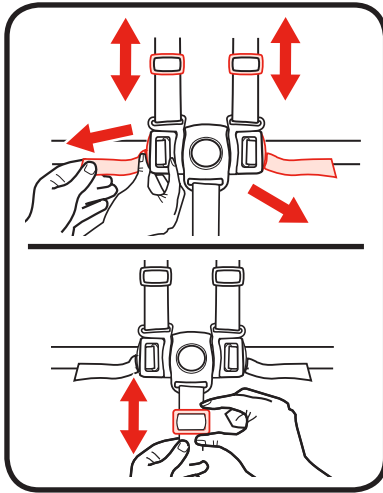

3. 滑動安全肩帶、安全腰帶與安全股帶的調整環，以調節安全帶鬆緊。


Use slide adjuster on shoulder, waist and crotch straps for tighter adjustment.

### 3點式安全帶 3 Point Harness

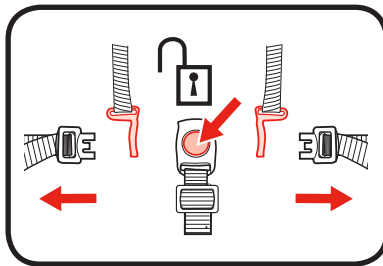

1. 解開時，請按下扣環上的按鈕，鬆開安全腰帶。

To open, press button on buckle to release the waist straps.

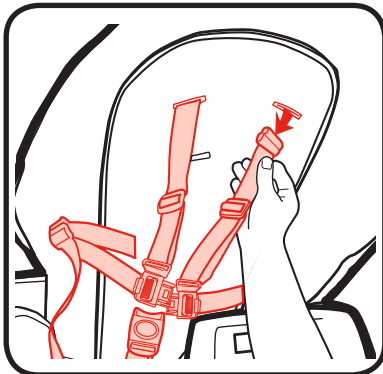


2. 將安全肩帶由椅背與座椅保護套導孔中抽出，再由高腳椅上取下。

Insert shoulder straps through seat back and seat pad and remove from highchair.


3. 如圖所示，將安全腰帶插入安全帶扣環。

Attach waist straps to harness buckle as shown.

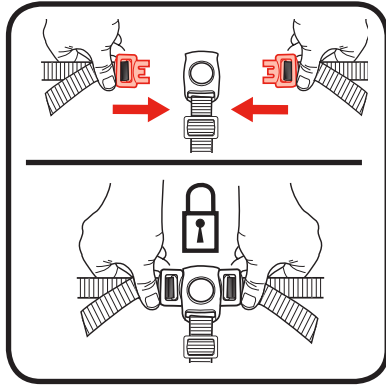

4. 滑動腰部及股帶的調整環，以調節安全帶鬆緊。

Use slide adjuster at waist for further adjustment.

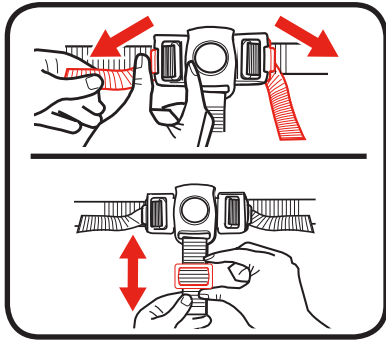


## 安全帶高度調整 Harness Height Adjustment

需改變安全肩帶導孔位置時，請確認安全肩帶穿過座椅保護套和椅背上的相同導孔。

安全肩帶必須穿過與肩同高或略高於肩膀的導孔。請避免扭轉安全帶。


When changing shoulder strap slots, **MAKE SURE** shoulder straps are going through same slots in seat pad and seat back.

The shoulder straps must go into slot that is even with or slightly above the shoulders. Avoid twisting straps.

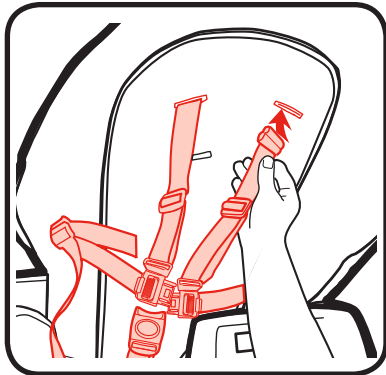


## 4-H 座椅模式 Chair Modes

### 孩童高腳椅 Toddler Chair

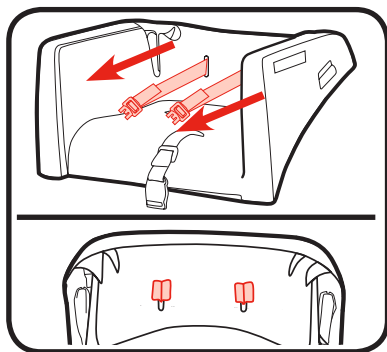

1. 如果孩童不足 36個月而且體重在 18 公斤 (40 磅) 以下，必須使用三點式安全帶。拉動安全帶，使安全帶固定檔片貼齊座椅背面。

If child is under 3 and up to 40 lb (18 kg), you need to use the three point harness. Pull harness so that mounts are flush with back of booster.

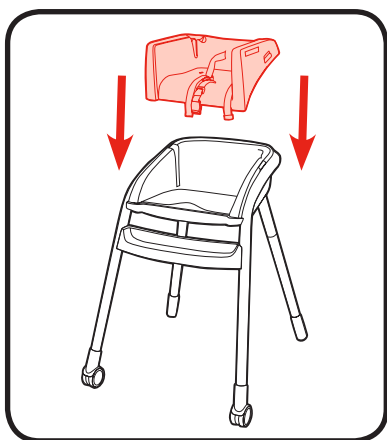

2. 將幼童座椅固定於孩童高腳椅上。使用三點式安全帶來固定孩童。

Attach toddler booster to toddler chair. Secure child using 3 point harness.




3. 孩童餐椅適用於 36至 72個月及體重27.3kg以下之孩童。請拆下幼童座椅。

將孩童放上孩童餐椅。


Toddler Chair is for a child 3 years to 6 years and up to 60 lb (27.3 kg). Please remove toddler booster.

Place child in toddler chair.

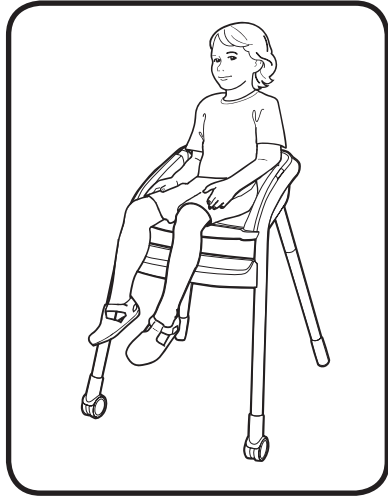

4. 將孩童餐椅推到桌旁。


Push toddler chair under table.

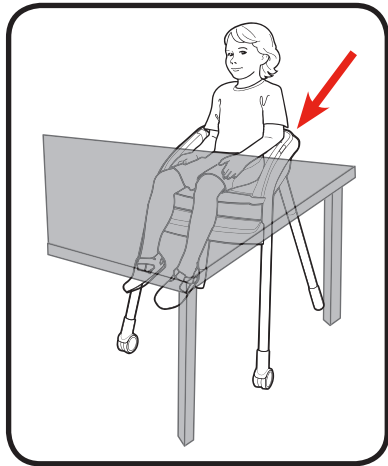

## 4-I 孩童用餐桌椅使用時 Using as Toddler-sized Chair and Table


### ⚠ 警告WARNING:

- 請務必依指示使用本產品。
- 請勿站立於本產品上，或將本產品做為腳踏凳使用。
- 請勿坐或站在餐桌上。
- **ONLY USE PRODUCT AS INSTRUCTED.**
- **DO NOT** stand on seat or use as step stool.
- **DO NOT** sit or stand on table.

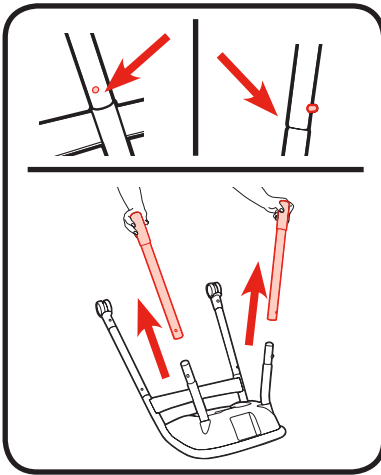

1. 如圖所示，上下翻轉座椅。按下孩童高腳椅的椅腳上的按鈕，將後椅腳下段拆卸。


Flip chair over as shown. Press buttons on toddler chair legs and remove bottoms of rear legs.

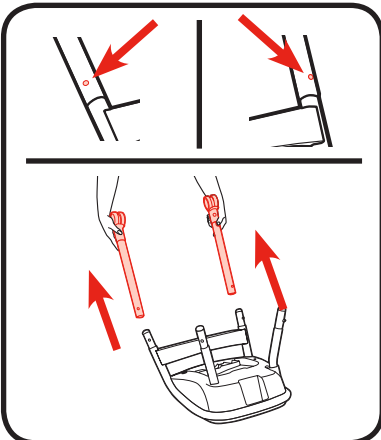

2. 在前椅腳重複相同動作。
- Repeat on front legs.


3. 將座椅翻轉正面朝上，即可做為孩童座椅使用。

Flip seat over to use as toddler sized chair.

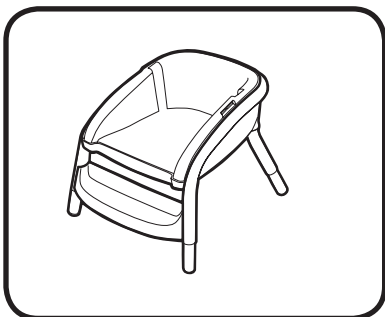


4. 如果餐盤裝在餐椅上，請拉住餐盤底部的把手，將餐盤從幼童座椅上取下。


If tray is attached to booster, pull levers on bottom of tray and remove tray from infant booster.

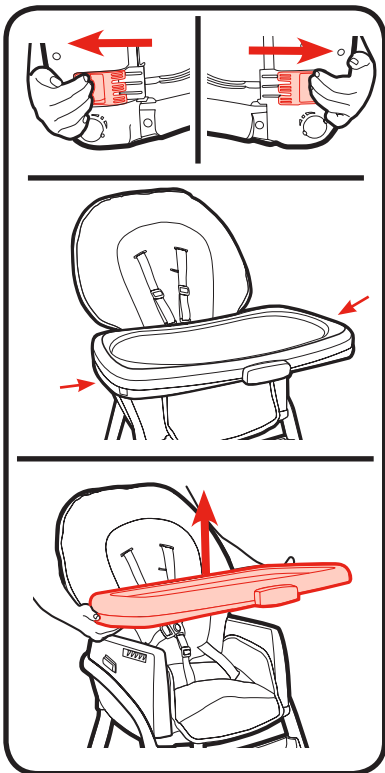

5. 將餐盤上下翻轉，以便查看餐桌底部的桌腳導孔。


Flip tray over to access leg openings.

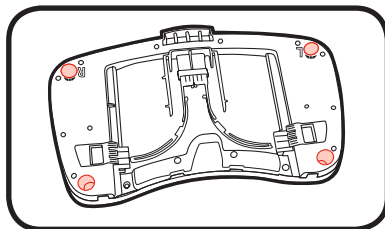

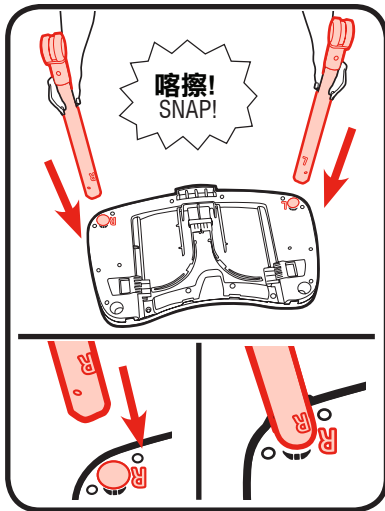


6. 將標有 **R** 字樣的右前桌腳 (附輪)，對準餐盤上旁邊標有 **R** 字樣的導孔。如圖所示，將桌腳角度稍微朝外，斜插進餐盤底部的前方導孔。在標示有 **L** 字樣的左前桌腳 (附輪) 上重複相同動作。

Line right front leg (with wheel) that has **R** on it up with the opening with **R** next to it on tray. Angle leg inward as shown and insert into front opening in bottom of tray. Repeat on left front leg (with wheel) with **L** on it.

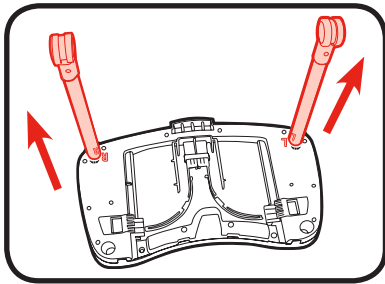


7. 向上拉動，確認桌腳已確實固定。

**CHECK** legs are attached by pulling up on them.

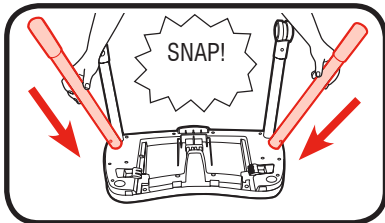

8. 如圖所示，將後桌腳 (無輪) 的角度稍微朝外，斜插進餐盤底部的後方導孔。


Angle rear legs (without wheels) inward as shown and insert into rear openings in bottom of tray.

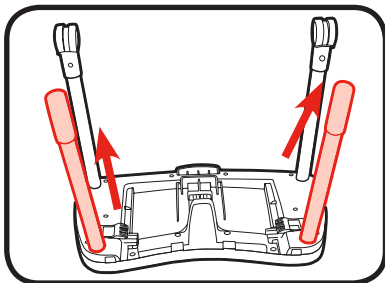

9. 向上拉動，確認桌腳已確實固定。

**CHECK** legs are attached by pulling up on them.

- 10.將餐桌上下翻轉正面朝上。  
Flip table over.

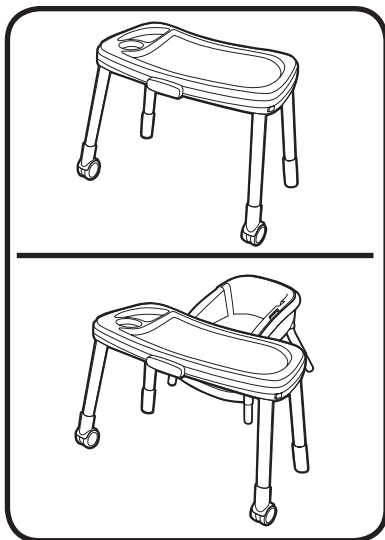


### 孩童用餐桌椅

適用於36個月起~72個月左右  
(27.3kg)孩童

Toddler Sized Chair & Table


Up to 6 years & 60 lb (27.3 kg)

## 拆卸餐盤桌腳 To remove legs from tray

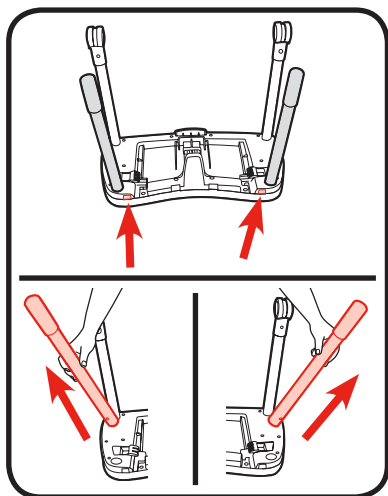

1. 按下餐盤上的按鈕，拆卸桌腳。

Press buttons on tray and remove legs.

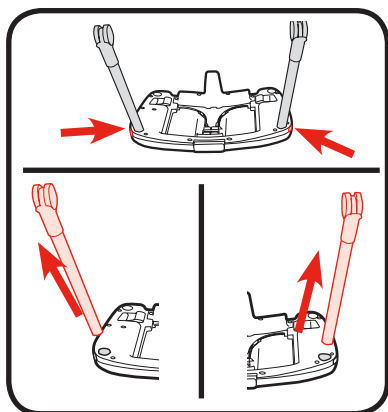

2. 在另一側桌腳重複相同動作。

Repeat on other set of legs.

## 5-A 日常保養 Care and Maintenance


### 拆卸座椅保護套 Removing Seat Pad

僅限特定型號，請檢查座椅保護套上的保養標籤。

Certain models only, **CHECK** care tag on seat pad.

1. 如圖所示，解開座椅底座的掛鉤。

Disconnect hooks from bottom of seat as shown.

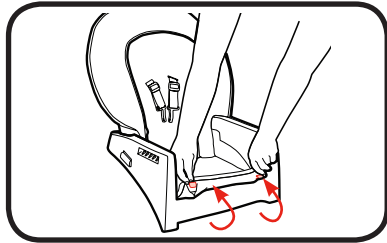


2. 將安全股帶由座椅保護套導孔中抽出。


Push crotch strap through slots in seat pad.



3. 將安全腰帶由座椅保護套導孔中抽出。


Insert waist straps through slots in seat pad.

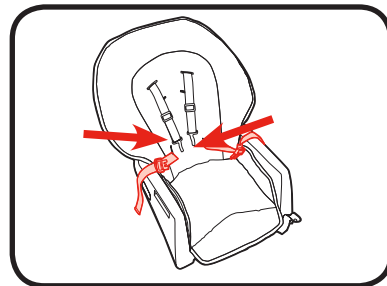

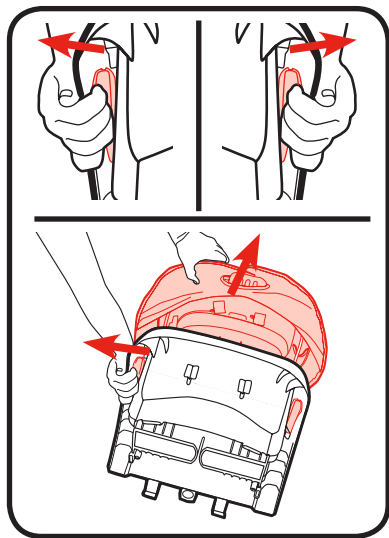


4. 若要拆下椅背，請拉住幼童座椅底座側面的拉把，分開座椅及椅背並向上拉起椅背。在另一側重複相同動作。

To remove backrest, pull lever on side of infant seat base to release seat back and pull up on backrest. Repeat on other side.

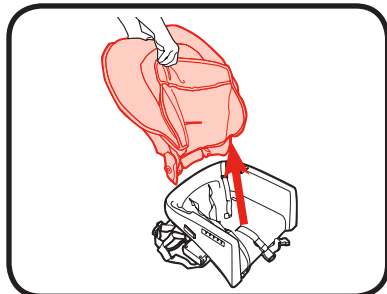

5. 將椅背從座椅底座拉起。  
Pull seat back away from seat base.

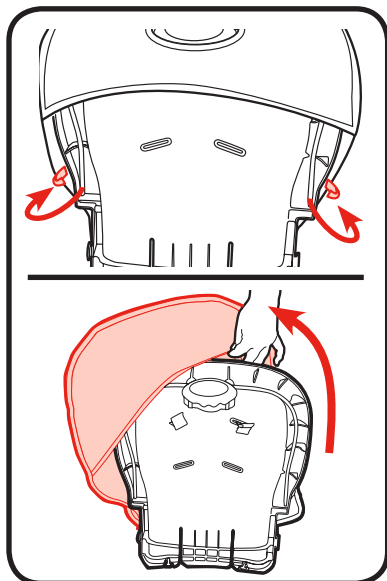


6. 解開椅背上的掛鉤，然後從椅背上取下座椅保護套。  
Disconnect hooks from seat back and unwrap seatpad from seat back.




7. 解開椅背下方的安全帶織帶。

Disconnect webbing tabs from seat back.

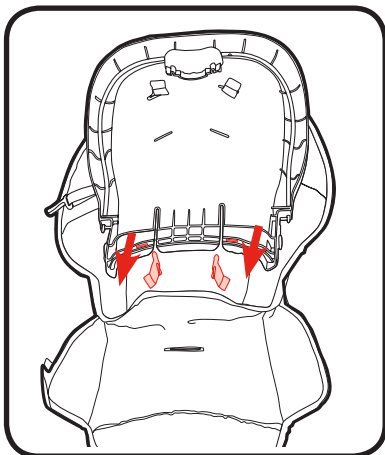

8. 將安全肩帶由座椅保護套導孔中抽出。

Insert shoulder straps through seat pad.

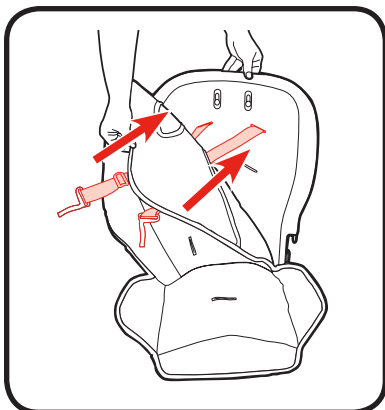

組裝時，請以相反順序步驟執行。

Reverse steps to re-attach.

- 時常檢查高腳椅，以防零件磨損、縫製品磨損或脫線斷裂，並視需要更換或維修零件。僅可使用Graco的替換零件。
  - 清潔高腳椅架時僅可使用家用肥皂和溫水，不得使用漂白水。
  - 清潔可拆卸的座席縫製品時，請參閱座椅保護套保養標籤上的洗滌說明。
- **FROM TIME TO TIME CHECK YOUR HIGHCHAIR** for worn parts, torn fabric or stitching. Replace or repair the parts as needed. Use only Graco replacement parts.
  - **TO CLEAN HIGHCHAIR FRAME**, use only household soap and warm water. NO BLEACH.
  - **TO CLEAN REMOVABLE SEAT COVER**, Refer to your care tag on your seat pad for washing instructions.

## 保養說明 Care instructions

- 單獨於洗衣機以極輕柔洗程序清洗，水溫不超過30°C
  - 不得使用漂白水
  - 請平放陰乾
- Machine wash separately in cold water-delicate cycle
  - **DO NOT** bleach
  - Lay flat to dry under shade



## Notes

# 保證書

( 僅限台灣地區使用 )

## 保固規定

1. 消費者請於購買時要求經銷商在本保證書上蓋章，並填上銷售日期。
2. 本公司產品之保固期間為自購買日起一年間。
3. 產品在保固期間內需要維修服務時，請出示本保證書。
4. 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5. 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由製造商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6. 免費修繕服務不包含以下項目。
  - ◎非歸責於製造商責任之任何損壞與故障。
  - ◎坐墊、遮陽篷等刮傷。
  - ◎使用者任意變更所引起。
  - ◎由自然災害或事故等原因所引起。
  - ◎框架自然劣化（塗料部分需時常保養）。
  - ◎錯誤的使用方法或保養不良所致。
  - ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況，及發現有零件需要更換時，台灣國內請向公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

產品	TABLE2TABLE™	型號	
		購買日期	年 月 日
顧客資料	姓名 地址  電話 E-mail	經銷商 確認章	(請務必蓋章，保證方為有效)

- 請確認購買時之經銷商店名稱，填寫型號、購買日期。
- 本保證書不另行補發，因此請小心保管，避免遺失。
- 本保證書填寫之個人資料，僅使用於產品保固及修理事宜。

## 委製商

### Newell Pubbermaid Asia Pacific Limited

Unit 806, 8/F, Houston Centre, 63 Mody Road, Tsimshatsui, Kowloon, Hong Kong  
TEL : +852-2665-9175

## 進口商

### 台灣愛普力卡股份有限公司

總公司營業部：

地址：新竹縣竹北市台元街28號5樓之3 電話：(03)5525688 傳真：(03)5525690

維修服務中心：

地址：新竹縣竹北市福興路885號 電話：(03)6561261 傳真：(03)6561267

信箱：0800@aprica.com.tw 統一編號：22662003 網址：http://www.gracobaby.com.tw